



AMP TV100

# TV Listening System


## Operating Instructions



Please read and observe the following information and keep the operating manual nearby for future reference!


## Component part list

1. Headset Receiver
2. Transmitter
3. Power Supply Cable
4. Battery (x2)
5. Audio Cable (3.5mm stereo plug)
6. RCA Adapter Cable
7. TOSLINK Optical Cable
8. External Microphone

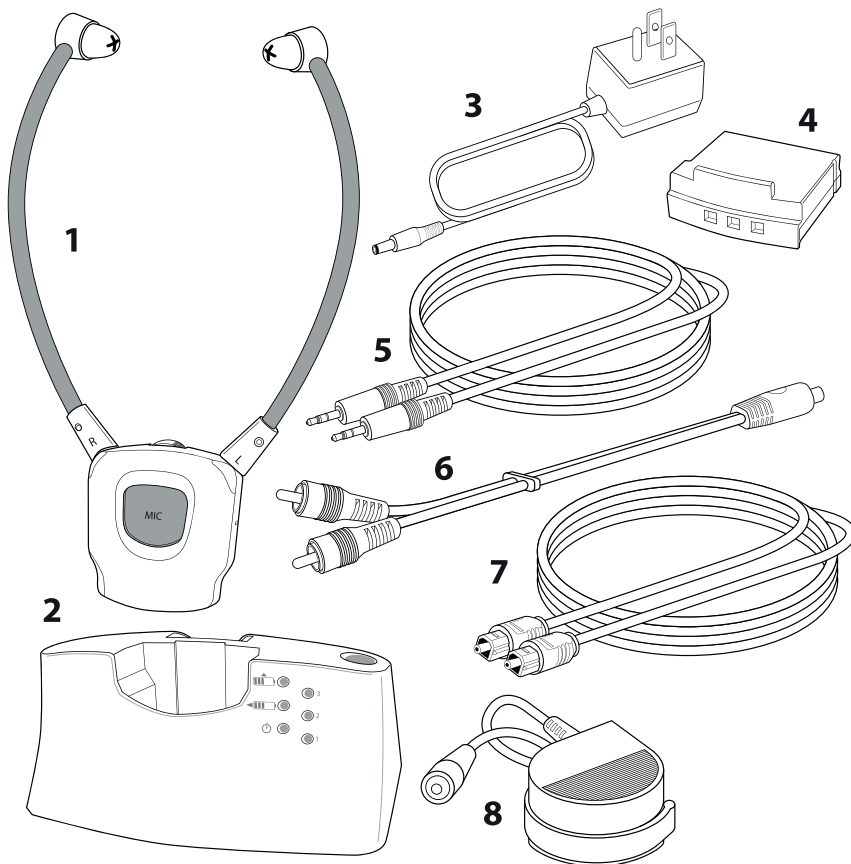


## Setup


1. Plug in transmitter (base station).

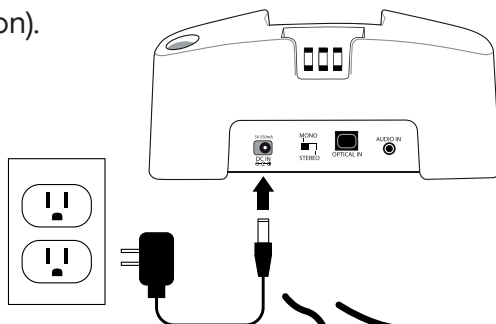

2. Insert battery into bottom of receiver.

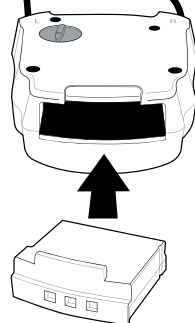

3. Place receiver in transmitter base to charge overnight (or at least 3 hours).

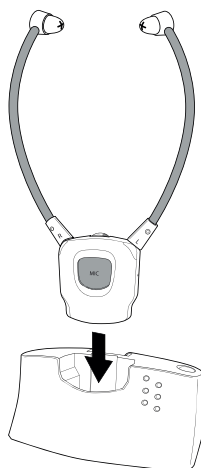


4. Check to see which type of audio output your TV has. Connect transmitter to TV by following the appropriate illustration in the set-up guide.

5. Enjoy!

**CAUTION:** If you have a heart pacemaker, contact your physician or the manufacturer of the pacemaker before using, to ensure that the pacemaker is not subject to interference.


## **How to use**

1. Turn on your sound source (e.g. TV).
2. While wearing the headset, adjust the volume level initially to a low volume to protect your hearing. The volume increases when you turn the dial toward "I0" and it decreases when you turn the dial in the direction of "O":
3. Turn the headset on with the switch on the side. The flashing green LED indicates that the receiver is switched on. The LED will be solid green once a signal is received from the sound source. **If the green LED continues to flash after one minute, refer to pg. 12 for pairing instructions.**
4. Set the desired volume on your headset.
5. We recommend that you turn off the headset and place back into the transmitter cradle when not in use, to ensure that the battery is always charged.

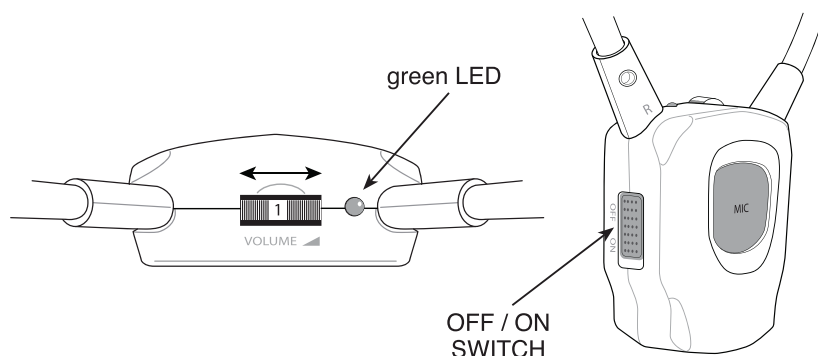



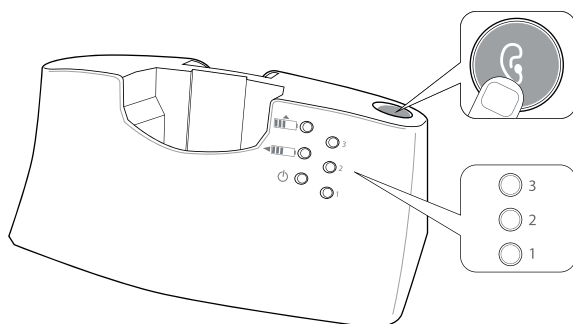

## Tone Presets

You can set the Tone/Clarity with the button on the transmitter. Press and release the button until you find a listening preset that is right for you.



The following table shows the settings. Select which setting works best for you.


Setting	Orange LED Indicator	Effect
Default	<div> <div>○ 3</div> <div>○ 2</div> <div>○ 1</div> </div> 	Flat
1	<div> <div>○ 3</div> <div>○ 2</div> <div>● 1</div> </div> 	Bass Boost+ Treble Boost
2	<div> <div>○ 3</div> <div>● 2</div> <div>○ 1</div> </div> 	Treble Boost
3	<div> <div>● 3</div> <div>○ 2</div> <div>○ 1</div> </div> 	Bass Boost

### **Important!**

*The overall operating time of the receiver can be reduced significantly depending on the listening volume and the accessories connected to the output.*

## Balance control

Amplifon headset receiver

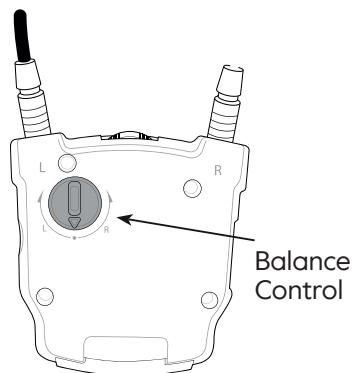


The balance controls the volume distribution between the right and the left ear with the headset with earbuds or headphones. Adjust the balance so that you have the same volume level in both ears.

## Volume control

Adjust the volume level on the headset initially to a low volume to protect your hearing.

The volume increases when you turn the dial toward "I O" and it decreases when you turn the dial in the direction of "O".

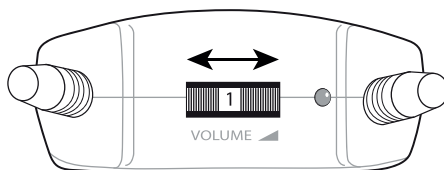


## Range

Amplifon uses the newest 2.4GHz technology. In optimal cases the range is up to 30.5 meters (100 feet).

The 2.4GHz radio frequency technology also works through walls. The range depends greatly on the building and the environment.

## Mono/Stereo Switch


You can switch to stereo when using the headset or the earbuds or headphones.

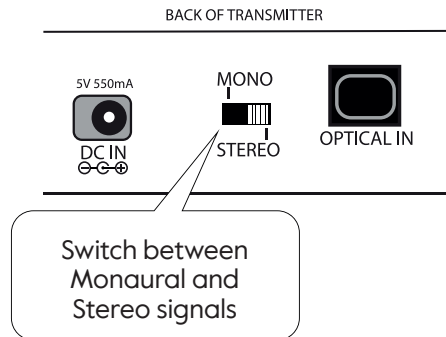

## MIC button


Anytime during use you can mute the sound source and activate the built-in microphone to carry on a conversation. Simply press and release the MIC button on the front of your headset.

The green LED light on top of the headset will turn red, indicating the internal microphone has been activated. To return to the TV, press and release the MIC button again. The red light will return to green.

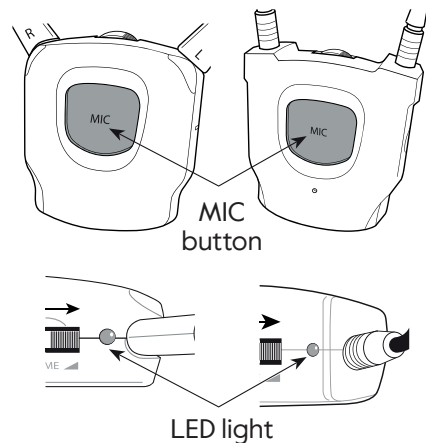

## Battery charging

**Headset:** The green LED on the headset will blink slowly and beep every minute when the battery is low.

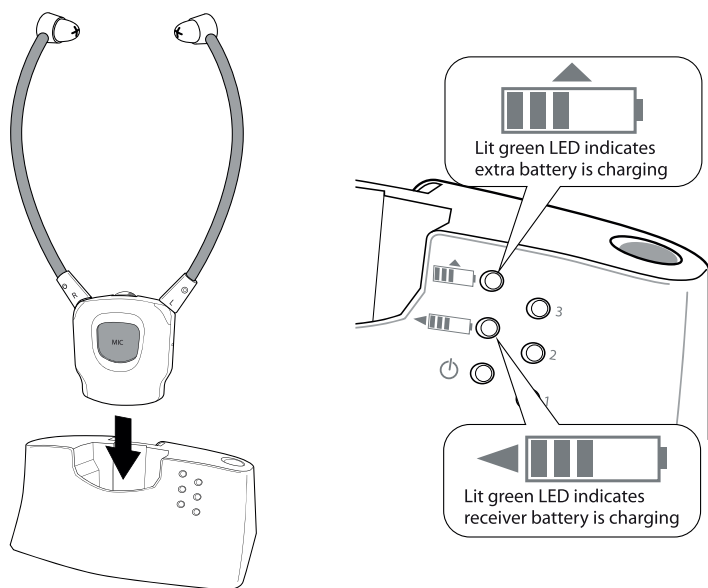


After use, gently place the receiver into the charging cradle of the transmitter.

Ensure that the receiver is placed correctly in the transmitter. If the receiver is charging, the green LED at the right side of the receiver is illuminated. For first time operation, it is recommended that the battery be charged for at least three (3) hours.

Once the battery is fully charged, it can be used up to six (6) hours. The operating time may vary, depending on the listening volume.

An additional battery can be charged in the transmitter. Additional batteries are available

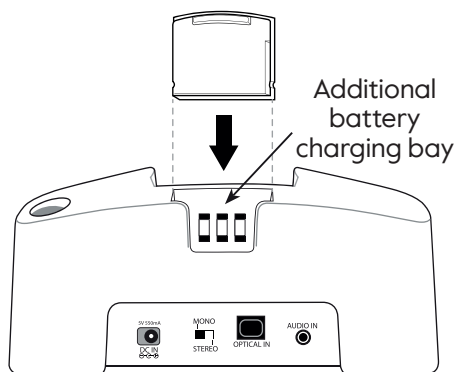



through your Amplifon distributor.

The additional battery can be inserted into the charging bay behind the receiver charging cradle. Please ensure that the sloped side points upward and that you insert it without applying too much force. The LED on the base is illuminated green when the battery is charging.

We recommend that you exchange the battery in the receiver with the spare battery in the transmitter weekly. This ensures that the batteries are used regularly and that they achieve a maximum service life.


## **Cleaning and care**

### **Cleaning the transmitter and the receiver**

If the device becomes dusty or dirty, you can clean it with a clean, damp cloth. Disconnect the transmitter from the power supply before cleaning.

### **Cleaning the silicone ear tips**

You can remove the ear tips from the headset. Clean the ear tips with mild soapy water. Dry the ear tips thoroughly and reattach them.

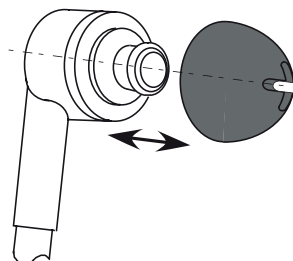

### **Replacing the silicone ear tips**

The hypoallergenic silicone ear tips should be replaced if they become worn or damaged.


New silicone tips can be ordered from your Amplifon distributor.

## Important information

Product damage caused by improper handling as well as damage due to contamination are excluded from the warranty.

This device is not protected against moisture. Do not place objects that are filled with fluids on or near the device, e.g. vases.

Open fire sources such as burning candles, should not be placed on or near the transmitter.

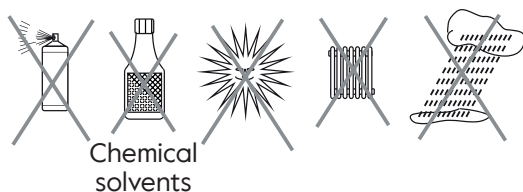


## Warranty

Refer to the warranty card included in the product package.


## Connection guide

### Connect to TV via Optical cable

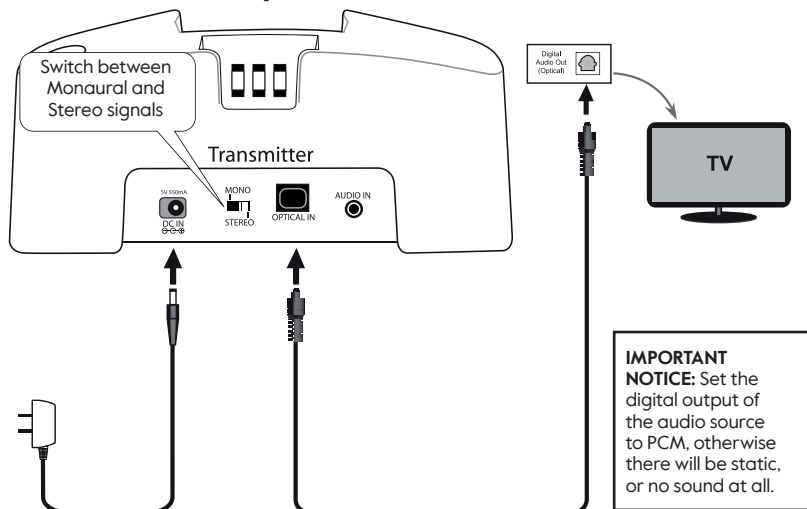

## Connect to TV via RCA cable


**IMPORTANT:** TV must have Audio OUT jacks.  
(Will not work on Audio IN jacks.)

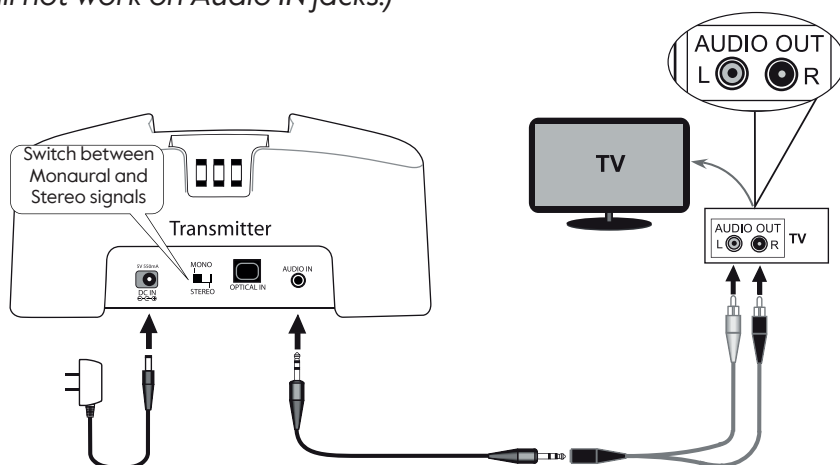

If connecting to a PC use either the headphone jack or if available, the optical audio output.


---

## Connect to TV via single audio cable

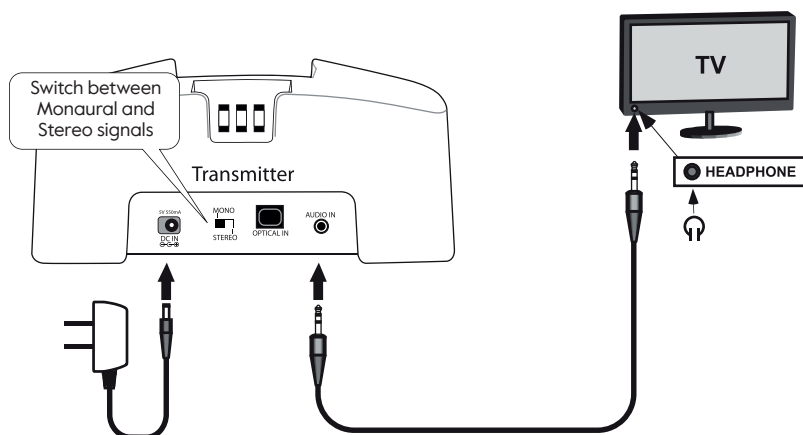

**Note:** Using the headphone jack may mute the TV speakers.

**If other options have not been effective, plug in  
Microphone (included) instead of direct connection**

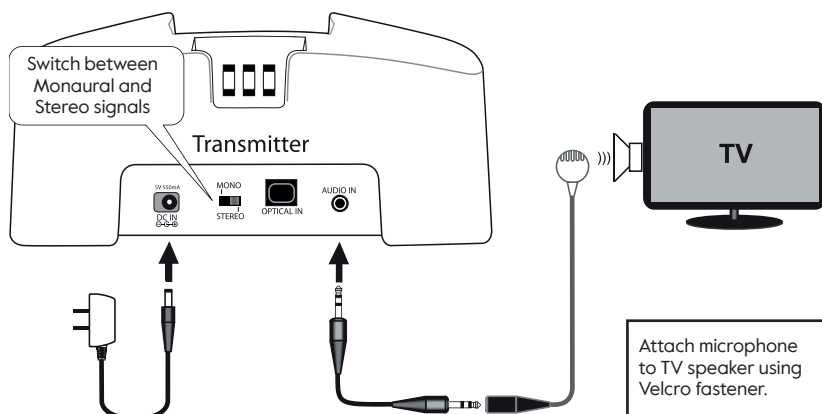

## **Technical specifications: headset**

<b>Transmission mode</b>	Digital RF System
<b>Carrier frequency</b>	2.4GHz ISM BAND
<b>Operating voltage</b>	Transmitter SVC 550mA Receiver 3.7 V, 350mA Lithium Polymer Battery
<b>Frequency response</b>	30Hz-20KHz
<b>Distortion</b>	<0.5%
<b>Signal-to-noise ratio</b>	>75dB
<b>Listening time</b>	up to 6 hours
<b>Range</b>	up to 25 meters (82 feet) (open area)

## **Troubleshooting**

### **The Headset Receiver cannot be linked to the Transmitter, please follow this procedure for Pairing:**

1. Turn OFF the power to the Transmitter by unplugging the power supply.
2. Turn ON the Headset Receiver.
3. Press and hold the MUTE Button on the Receiver for 5 seconds. The green LED on the Receiver will flash quickly.
4. Turn ON the Transmitter by plugging in the power supply.
5. The Receiver and the Transmitter are then Paired automatically and the green LED on the Receiver lights steadily.
6. One Transmitter can be connected to multiple Receivers as above

### **No sound**

- Ensure that the power supply is inserted in the outlet and that it's cable is properly connected to the DC IN connector on the Transmitter.
- Ensure that the Receiver power ON/OFF switch is switched to ON. Make sure the battery is charged. If not, recharge the battery or replace it with a fully charged battery.
- Ensure that the TV set, Hi-Fi system or audio component is switched ON and set to a channel that broadcasts an audio signal.
- Use the Volume Control on the Receiver to increase the sound level.
- Try using a different connection RCA, OPTICAL or HEADPHONE.

### **Distortion**

- The Receiver may be too far away from the Transmitter. Move the Receiver closer to the Transmitter.
- The audio signal input level may be too low. Increase the volume from the audio source.
- The audio signal input level may be too high. Lower the volume from the audio source.